

Product description

- The Ics sensor with two switched outputs measures the distance to an object within the detection zone contactless. Depending on the adjusted detect distance the switched outputs are set.
- The output functions are changeable from NOC to NCC.
- Light emitting diodes (three-colour LEDs) indicate the switching status.
- The sensors can be trained using Teach-in processes.
- Using the LinkControl adapter (optional accessory) all sensor parameter settings may be made by a Windows-Software.

sensor that can be applied with normal reflectors with sufficient function reserve. When using good reflectors, such as a calm water surface, the sensor can also be used up to its **maximum range**. Objects that strongly absorb (e.g. plastic foam) or diffusely reflect sound (e.g. pebble stones) can also reduce the defined operating range.

Assembly instructions

- Assemble the sensor at the installation location.
- Plug in the connector cable to the M 12 connector, see fig.1.

		colour
1	+U _B	brown
3	-U _B	blue
4	D2	black
2	D1	white
5	Com.	grey

Fig. 1: Pin assignment with view onto sensor plug and colour coding of the microsonic connection cable

Start-up

Ics sensors are delivered factory made with the following settings:

- Switched outputs on NOC
- Detecting distances at operating range and half operating range
- Measurement range set to maximum range

Set the parameters of the sensor using the Teach-in procedure.

Operation

Ics sensors work maintenance free. Small amounts of dirt on the surface do not influence function. Thick layers of dirt and caked-on dirt affect sensor function and therefore must be removed.

Notes

- Ics sensors have internal temperature compensation. Because the sensors heat up on their own, the temperature compensation reaches its optimum working point after approx. 30 minutes of operation.
- During normal mode operation, a yellow LED signals that the corresponding switched output has connected.
- During Teach-in mode, the hysteresis loops are set back to factory settings.
- If no signal is transmitted to the Com input for 20 s during parameter setting mode the made changes are stored and the sensor returns to normal mode operation.
- You can reset the factory settings at any time, see »Lock Teach-in & factory setting«.
- Ics-sensors optional can be programmed using the LinkControl adapter LCA-2, see »Optional setting of parameters using the LinkControl Adapter LCA-2«.

Operating manual

Ics-Ultrasonic Sensors with two switched outputs

Ics-25/DD/QP

Ics-35/DD/QP

Ics-130/DD/QP

Important instructions for assembly and application

All employee and plant safety-relevant measures must be taken prior to assembly, start-up, or maintenance work (see operation manual for the entire plant and the operator instruction of the plant).

The sensors are not considered as safety equipment and may not be used to ensure human or machine safety!

The Ics sensors indicate a **blind zone**, in which the distance cannot be measured. The **operating range** indicates the distance of the

Assembly distances

The assembly distances shown in fig.2 for two or more sensors should not be fallen below in order to avoid mutual interference.



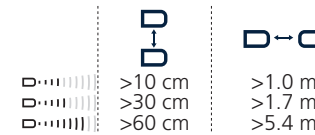


Fig. 2: Assembly distances


HEMOMATIK
Länna, S-142 50 SKOGÅS
www.hemomatik.se

2014/30/EU
MV-DO-074380-831022

Sensor adjustment with Teach-in procedure

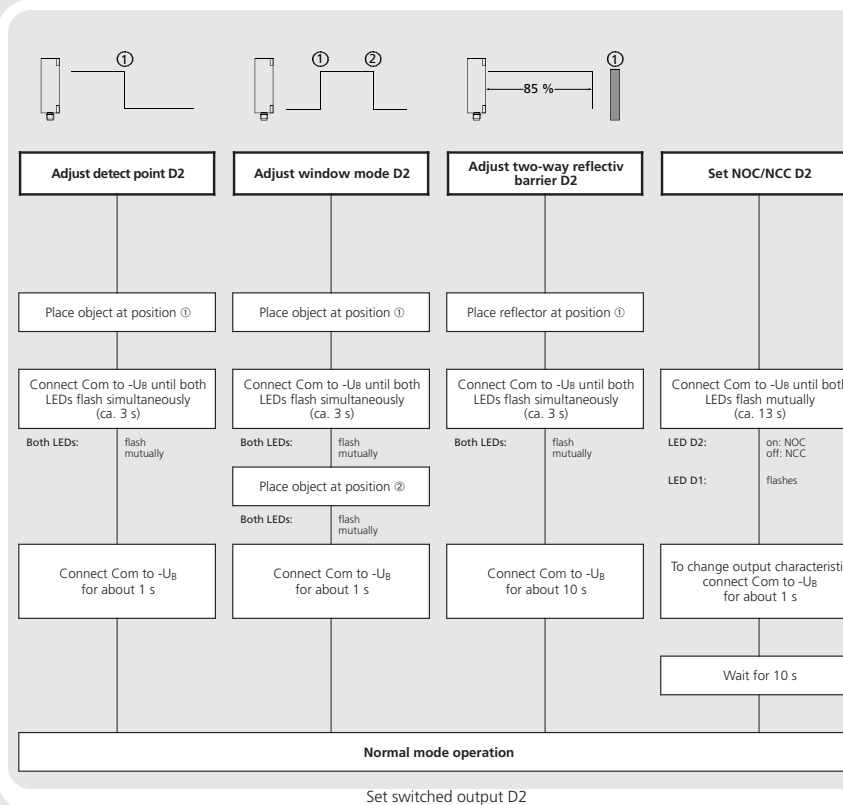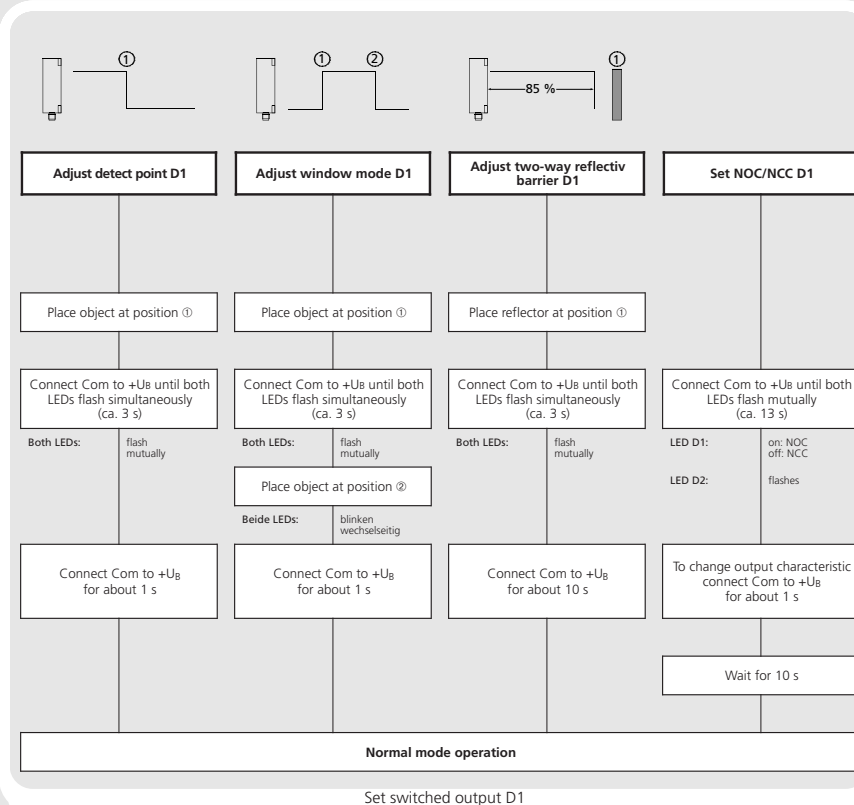


Lock Teach-in & factory setting

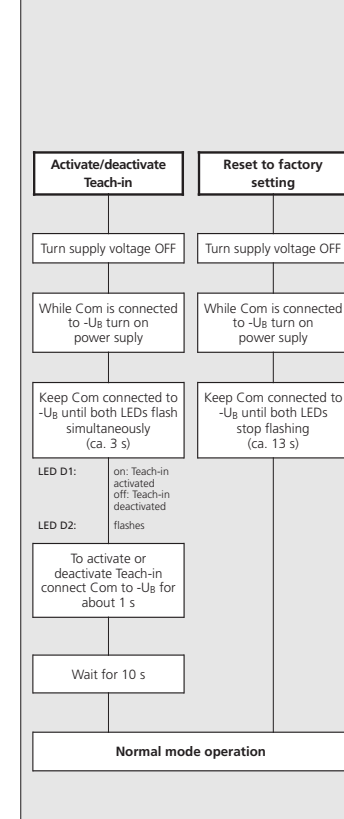


Offline programming

- Load sensor parameters in the LinkControl Adapter LCA-2
- Change parameters and additional functions as described here
- Write changed parameters back into the lcs sensor

Please refer to the quick reference guide on the LCA-2.

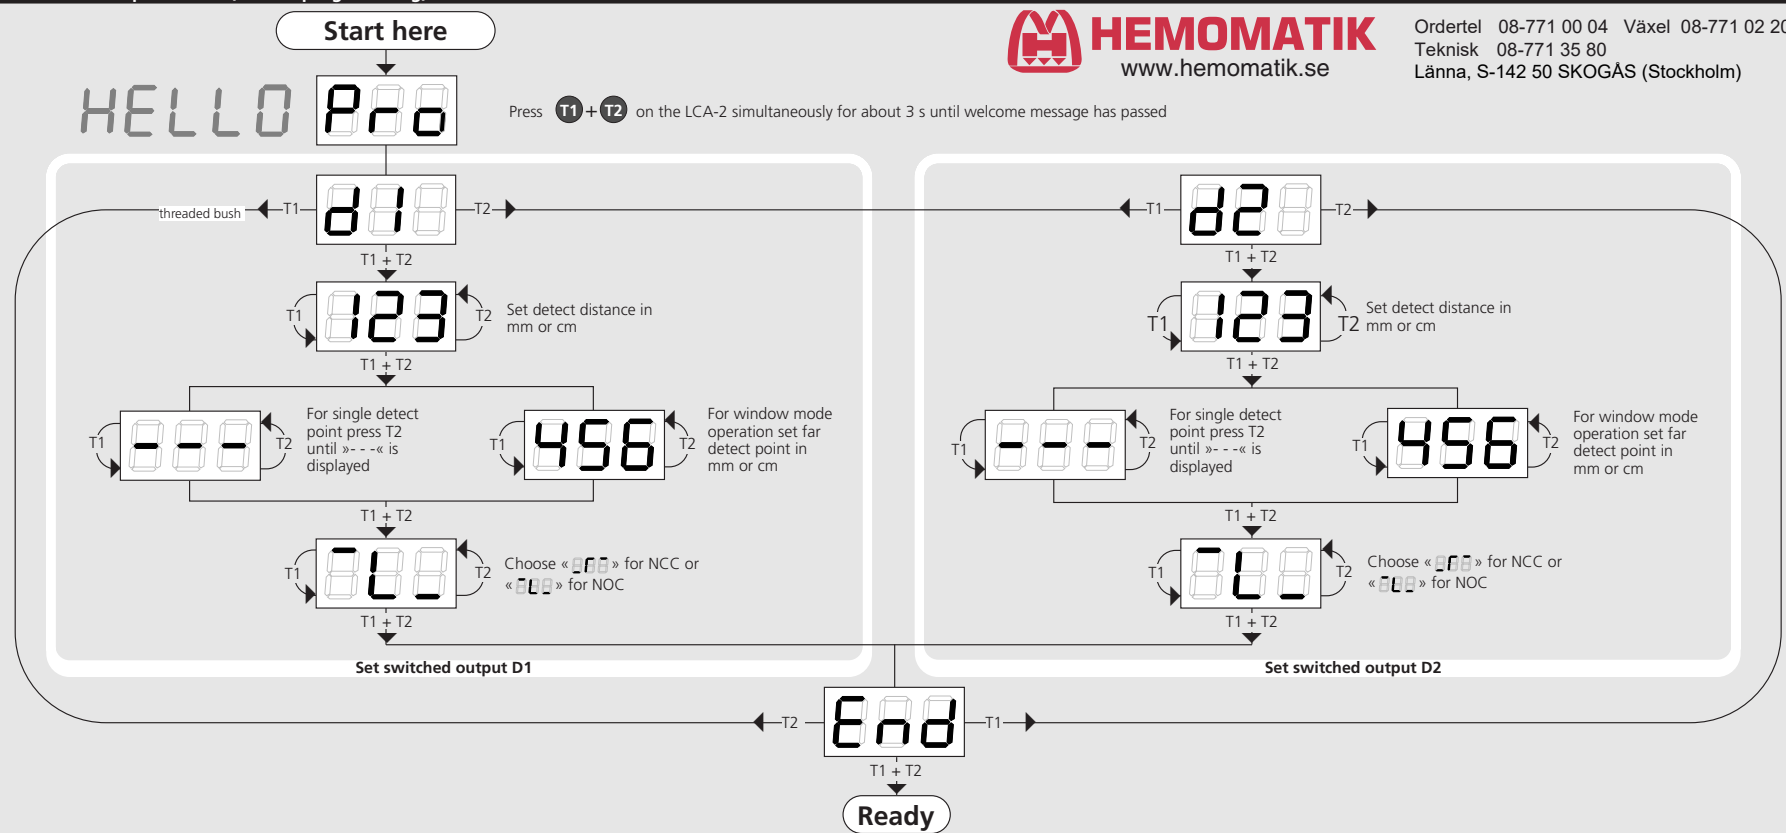

Setting of additional functions in the LCA-2

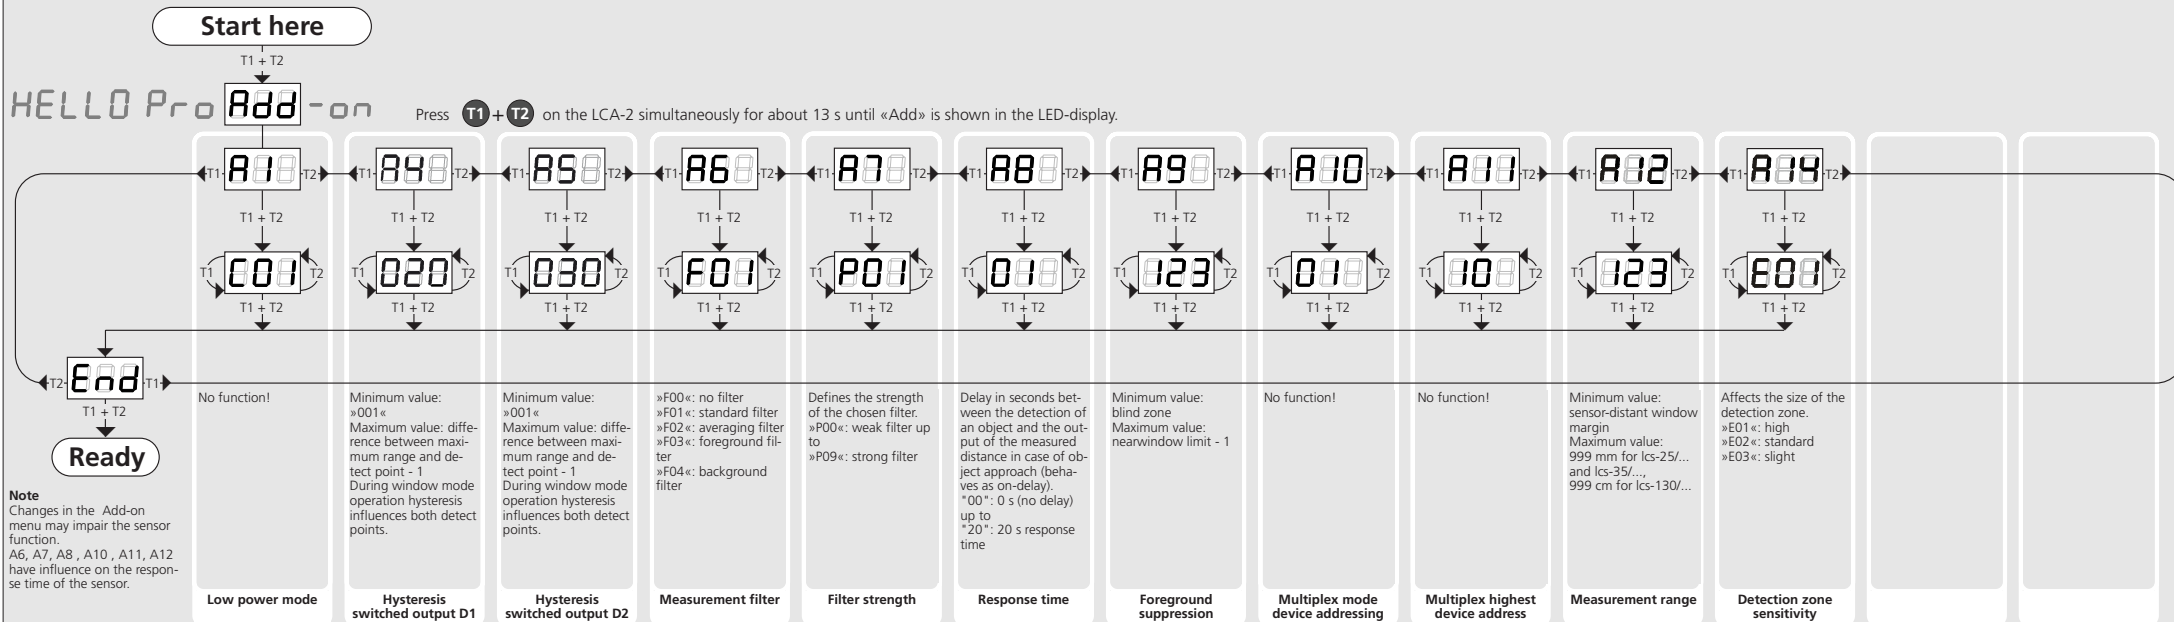

Note
Changes in the Add-on menu may impair the sensor function.
A6, A7, A8, A10, A11, A12 have influence on the response time of the sensor.